



PRESSURE/TORQUE CONVERSION CHART
8HEXDRV

PRESSURE (PSI)	FT.LBS.	NM
1000	763	1035
1200	914	1239
1400	1069	1449
1600	1232	1670
1800	1391	1886
2000	1551	2103
2200	1725	2339
2400	1889	2561
2600	2047	2775
2800	2198	2980
3000	2358	3197
3200	2512	3406
3400	2671	3621
3600	2839	2849
3800	2992	4057
4000	3157	4280
4200	3321	4503
4400	3482	4721
4600	3644	4941
4800	3807	5162
5000	3972	5385
5200	4133	5604
5400	4296	5825
5600	4456	6042
5800	4620	6264
6000	4781	6482
6200	4944	6703
6400	5106	6923
6600	5270	7145
6800	5427	7358
7000	5584	7571
7200	5751	7797
7400	5917	8022
7600	6074	8235
7800	6241	8462
8000	6396	8672
8200	6554	8886
8400	6718	9108
8600	6883	9332
8800	7047	9554
9000	7204	9767
9200	7369	9991
9400	7530	10209
9600	7692	10429
9800	7856	10651
10000	8014	10866